



Phrozen GO


Remote Control App


Phrozen GO is a mobile application designed for Phrozen Sonic Mighty 8K users to remotely control your printer and check your prints wherever you are.

- Supported OS: Android, iOS
- Compatible firmware: Sonic Mighty 8K V1.3.6 or above
- APP Language: English, Simplified Chinese, Traditional Chinese
- The Phrozen GO app is free to download and requires an active internet connection to operate.

Phrozen GO - Features

- Remote control, stop your prints from afar.
- Capture your printing process and save it to your phone.
- Connect multiple printers to your Phrozen GO account.
- Check your printing history for future reference.

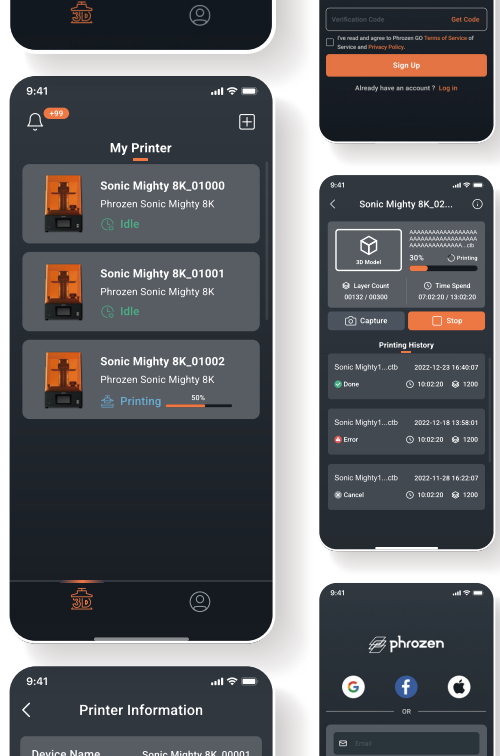

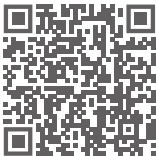

Android




iOS

Phrozen GO - Download


Please update your Sonic Mighty 8K firmware to V1.3.6b or above.
Check the [firmware update's instruction](#) for more information.

Download the “Phrozen GO” app through App Store or Google Play and complete the registration process.

Connection Settings

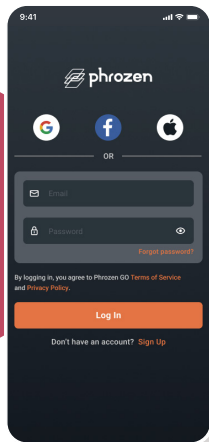

Complete the registration process.

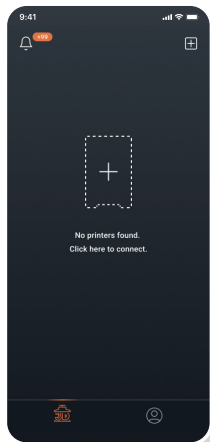

Tap "Add Printer" on the main screen to enter the scanning display.




On the 3D printer's touch panel, tap "Settings" and choose "Remote Control" to access the 3D printer's QR code.



Scan the QR code provided on your 3D printer screen to bind your account, then confirm the connection on the 3D printer screen.

Phrozen GO

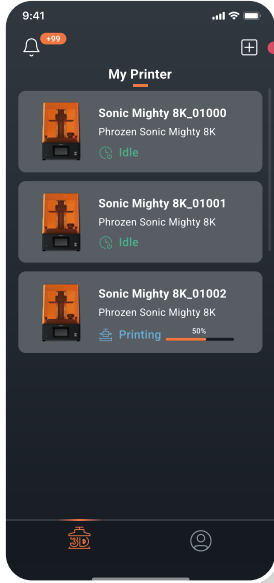


Phrozen GO - Add Multiple Printer


To connect multiple printers, return to the main screen and click "Add Printer" in the upper right corner. Repeat the operation to scan and bind your account.




Phrozen GO Connection Settings

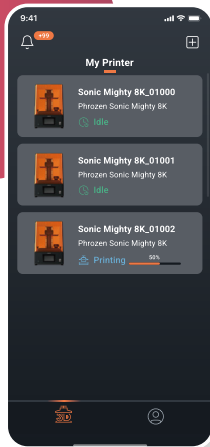


Choose the 3D printer you want to check on.

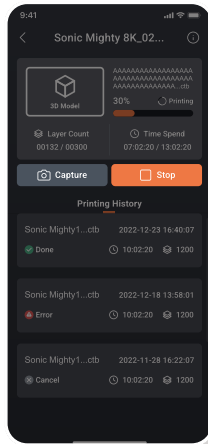

Tap **Capture** to take a picture or **Stop** to end your current print.

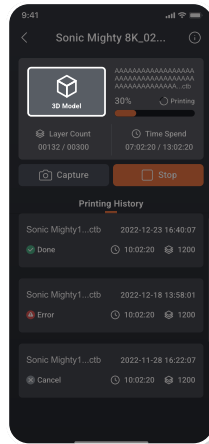

Tap on the screen to check the captured image.


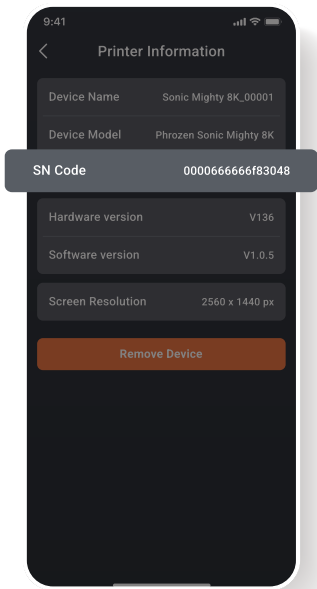


Phrozen GO - Check Connection

To check the devices you are connected to, open Phrozen GO and tap **Printer Information** > **SN Code**.

On your 3D printer, choose **Settings** > **System** > **Hardware Testing** > **SN Code**. The connected device and 3D printer will display the same SN Code.

NOTICE: One 3D printer can only be bound to one Phrozen GO account at a time. If you want to use the 3D printer with a different account, please unbind the original account first before binding it to another account.

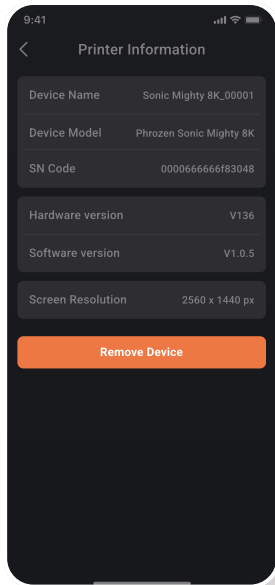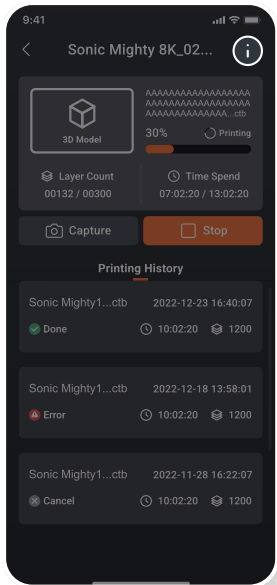

Phrozen GO - Unbinding

To unbind your account, choose the 3D printer you want to unbind from on your Phrozen GO app. Tap on the top right corner to access Printer Information and choose Remove Device.





Facebook



Facebook Group

Sonic Mighty 8K



YouTube



Instagram