




Air Purifier

Dear User

Thank you for joining us. Please read the manual thoroughly and follow the instructions step-by-step to get the best printing experience.

親愛的使用者您好

非常開心您的加入，為了您良好的使用體驗，請務必詳閱說明書。

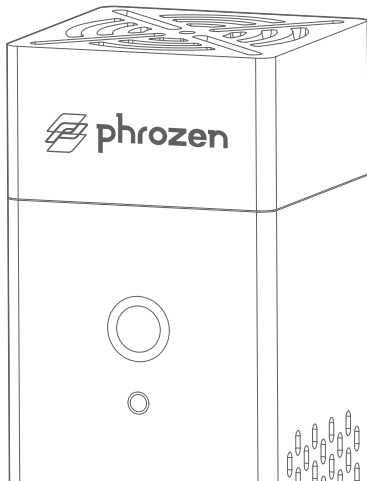

Introduction | 產品介紹

PART.1

Top Cover
上蓋

PART.2


Power Switch
電源開關

PART.3

LED Indicator
指示燈

PART.4

Charging Port
充電孔

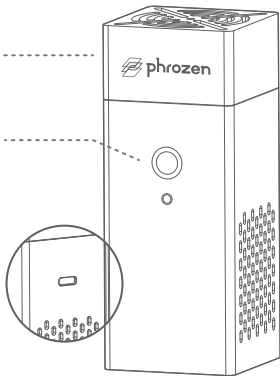

Activated Carbon Filter
活性炭濾心



Air Purifier
空氣清淨機



Charging Cable
充電線

Product Specifications 產品規格

機台尺寸 | Product Size | 115 x 46 x 46 mm

濾心尺寸 | Activated Carbon Filter Size | 39 x 39 x 18 mm

電池容量 | Battery Capacity | 2000 mAH

輸入電壓 | Input | DC 5V

額定功率 | Power | 0.6W

User Guide | 使用說明

- 1 Remove the top cover of the air purifier and take out the activated carbon from its plastic packaging, then fasten the cover.
 - 2 Charge the device with a type-C cable. The light will flash during charging and goes off when it is sufficiently charged.
 - 3 Turn on the air purifier and check the green light before placing it inside the plastic case of your 3D printer.
- 1 打開空氣清淨機上蓋，拆開濾心外層塑膠袋包裝，放入濾心並蓋緊上蓋。
 - 2 連接充電線，指示燈顯示閃爍綠燈即為充電中，燈滅即完成充電。
 - 3 開啟空氣清淨機電源，確認指示燈顯示綠燈，即可放入您的3D列印機中。

- Light On : On / 機器正常運轉
- ◐ Light Flashing: Charging / 充電中
- Light Off : Low battery / 電量不足

NOTICE ⚠ 注意事項

| **Please remove the plastic packaging of the activated carbon filter before use.**

Replace the activated carbon filter every 3-6 months for the best result.

| **DO NOT** turn on the air purifier when it's charging to avoid damaging the unit.

| Keep the device and its accessories out of reach of children.

| Dry the used carbon in the sun or a well-ventilated place to dissipate the smell.

| **使用前請拆開活性炭濾心外層塑膠袋。**每3-6個月需定期更換活性炭濾心，以保持空氣清淨機的效能。

| 充電中**請勿**開啟空氣清淨機，避免造成損壞。

| 請將機器及配件放置於兒童觸碰不到的地方。

| 短期內，可將使用過的活性炭濾心放至陽光下曝曬、或置於空氣流通處，揮發吸附的異味。

Hazardous Substances 產品有毒有害物質元素清單

Part 部件	Pb 鉛	Hg 汞	Cd 鎘	Cr(VI) 六價鉻	PBB 多溴聯苯	PBDE 多溴二苯醚
Plastic Parts 塑膠物件	○	○	○	○	○	○
Metal Parts 金屬物件	×	○	○	○	○	○
Circuit Board Assembly 電路板組件	×	○	○	○	○	○
Cables and Wires 線材類	×	○	○	○	○	○

This table is made according to SJ/T 11364.

○ : Indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

× : Indicates that the concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572.

本表格根據 SJ / T11364 的規定編製

○ : 表示該有害物質在該部件所有均值材料中的含量均在 GB/T26572-2011 規定的限值要求以下。× : 表示該有害物質至少在該部件的某一均值材料中的含量超過 GB/T26572-2011 規定的限量要求。

Phrozen 3D Printer

🌐 phrozen3d.com ☎ +43-1-997809410 / +886-3-621-0505

📍 3F., No.287, Niupu Rd., Xiangshan Dist., Hsinchu City 30091, Taiwan



APEX CE SPECIALISTS LIMITED
Unit 3D North Point House, north Point Business
Park, New Mallow Road, Cork, T23 AT2P, Ireland
Tel: +353212066339
E-Mail: info@apex-ce.com



APEX CE SPECIALISTS LIMITED
89 Princess Street, Manchester, M1 4HT, UK
Tel: +441616371080
E-Mail: info@apex-ce.com